


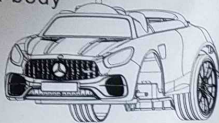


 
 
 

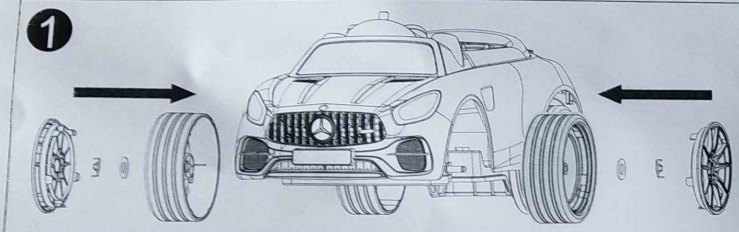



## Parts list

1. Car body 	2. Steering wheel 	3. Backrest 	4. Instruction book 
7. Screw stem 	8. Screw 	5. Wheel cover 	6. Wheel x 2 
9. Gasket X2 	10. circlipX2 		


## Installation steps



Install the wheel, gasket, ring spring to the front axle as show in figure, then fix the wheel cover finally.


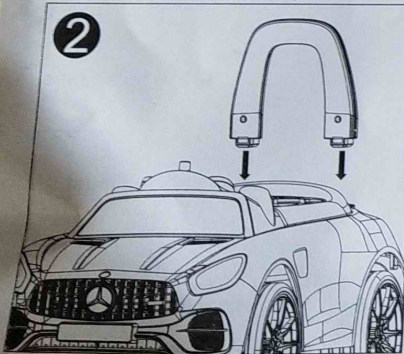


Insert the backrest at the right placement as show in figure

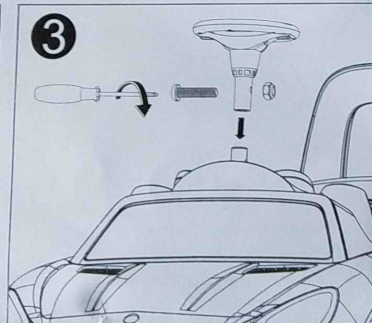


Insert the backrest at the right placement as show in figure.

## Replace the battery

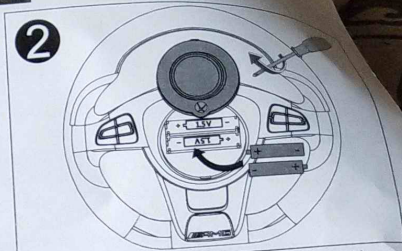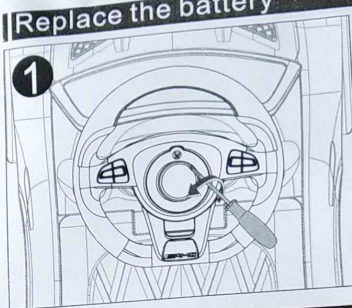


Open the battery cover, replace the battery in correct polarity, then tighten the screw to close the cover

## Function introduction

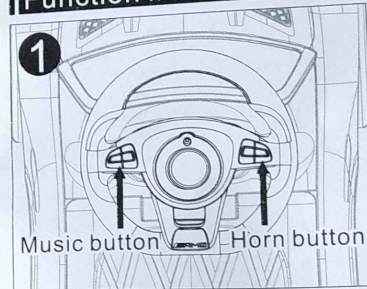

Music button      Horn button

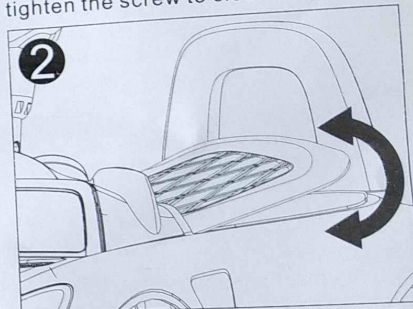

## Troubleshooting

Fault type	Reason analysis
The music distortion or silence	check the battery is sufficient or not

## WARNING

1. Insert two AAA 1.5V dry batteries in correct polarity (the product excluding the dry batteries).
2. All batteries should be inserted in the correct polarity.
3. Only an adult who has read and understood the safety warning can recharge the rechargeable battery.
4. Non-rechargeable battery can't be recharged.
5. Before charging, the rechargeable battery must be taken out from the toys.
6. Do not mix old and new batteries, do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
7. Take out the dry battery from the steering wheel battery box if don't use this toys for long time.
8. Take out and properly deal with the exhausted battery.